


What to do if...  
What to do if...



	A tire punctures	P. 348	If you have a flat tire
	The engine does not start	P. 356	If the engine will not start
		P. 50	Engine immobilizer system
		P. 359	If the battery is discharged
	The shift lever cannot be moved out	P. 357	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 365	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 358	If you lose your keys
	The battery runs out	P. 362	If the battery is discharged
	The doors cannot be locked	P. 15	Doors
	The horn begins to sound	P. 52	Alarm
	The vehicle is stuck in mud or sand	P. 367	If the vehicle becomes stuck

 The warning light or indicator light comes on



P. 329 If the warning light turns on



nWarning lights


 Brake system warning light  
or  
 P. 329


 Malfunction indicator lamp  
or  
 P. 330


 "ABS" warning light  
or  
 P. 330

 Driver's seat belt reminder light P. 331  
 Front passenger's seat belt reminder light P. 331

 Low fuel level warning light P. 331


 Master warning light P. 331


 SRS warning light P. 330


 Electric power steering warning light P. 330

 Open door warning light P. 331

 Pre-collision safety system warning light P. 330

 Charging system warning light P. 330

 Low tire pressure warning light P. 331

 The warning message is displayed

P. 334 If the warning message is displayed